



Kirby Morgan Dive Systems, Inc.®

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342

www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com

Part #525-218 KM 57 Helmet Spares Kit

PART #	DESCRIPTION	QTY	PART #	DESCRIPTION	QTY
330-030	Screw	1	510-683	Chin Cushion	1
330-035	Washer	1	510-724	Low Volume Oral Nasal Mask	1
510-008	O-ring	2	510-754	Head Cushion Assembly	1
510-010	O-ring	1	515-033	Communication Set	1
510-029	O-ring	1	525-311	Side Block Kit	1
510-260	O-ring	1	525-718	Reg. Rebuild Kit, S.S.	1
510-450	O-ring	1	525-745	Head Cushion Foam Spacer Kit	1
510-490	O-ring	1	525-759	Quad-Valve Exhaust Kit	1
510-550	Oral Nasal Valve	1	530-035	Screw	2
510-561	Valve, Water Dump, Black	1	530-045	Screw	1
510-575	Nose Block Pad	1	530-052	Screw	2
510-628	Neck Dam	1	550-061	Whisker Spacer	2

*See next page for O-ring Identification

O-rings should be lightly lubricated with food grade silicone Dow Corning® 111 or equivalent in accordance with the operations and maintenance manual. Christo-Lube® may also be used. At a minimum, all helmet or BandMask® O-rings should be replaced at least once a year in accordance with the A2.1 checklist for the helmet or mask being inspected. During daily and monthly maintenance, O-rings and valves may be reused providing no damage or deformation is found. O-rings and valves may require replacement more often than yearly if the helmet or mask use is extreme, or if the helmet or mask is used in waters containing oil or chemical contamination. Daily cleaning and inspections as well as performing the monthly inspection (A2.2 checklist) will identify the need more accurately than simply placing a number of hours between overhaul. Store spare O-rings, valves and soft goods in a cool, dark, dry place. Avoid prolonged exposure to temperatures above 90 degrees Fahrenheit and/or exposure to ultra violet rays. Do not lubricate exhaust valves. Lubricating valves can cause dirt to stick, allowing leakage.

⚠ CAUTION

Use only KMDSI original replacement parts. The use of other manufacturers' parts will interfere with the performance characteristics of your life support equipment and may jeopardize your safety. Additionally, any substitutions will void any warranties offered by KMDSI. When ordering spares, always insist on Kirby Morgan Genuine Parts.



Kirby Morgan Dive Systems, Inc.®

1430 Jason Way Santa Maria, California 93455

Phone: 805/928-7772 Fax: 805/928-0342


www.KirbyMorgan.com email: kmdsi@KirbyMorgan.com



510-008



510-010

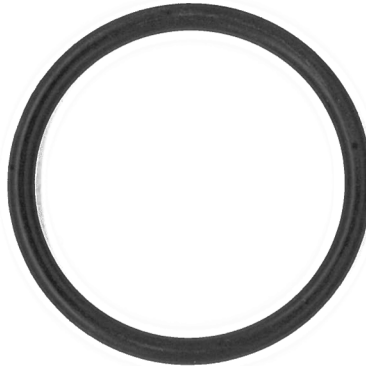

510-029



510-490

NOT SHOWN

510-260 6.5" × 0.153"

1. Face Port O-ring

510-450 9" × 0.278"

1. Neck Ring O-ring

